 


# MD-313R Wireless siren manual

## 1. Brief

Wireless siren is a kind of alarm device with strong popularity.  
Working with alarm panel, detector , remote at the same  
frequency to achieve flash light and alarm sound once trigger.  
Anti-tamper to avoid intentional damage or dismantle.

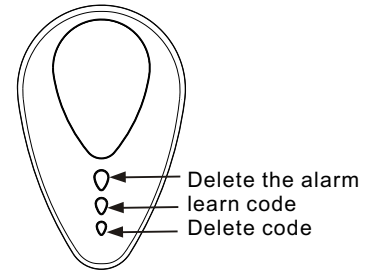

Appearance

## 2. Technical parameter

ITEM: NTA-SRW41

Static current=0.7 mA

Voltage:4.5V

Transmit /Receiving frequency 433MHz/868MHz

Alarm Decibel: around 100db

 
Alarm current=500mA

Transmit /Receiving distance=80M(OPEN AREA)

## 3. Installation

### 3.1 Mount base bracket:


Keep away from ground on 2.4-2.8m

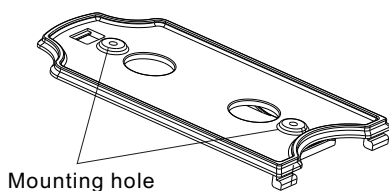

A. Mark drill hole and drill on the wall

B. Attach the base to the wall by screws

### 3.2 installation

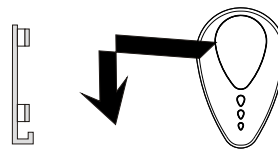 


Refer to the figure on the left to install the siren.

## 4. The battery placement

 Need place the batter at the first time using. When siren feedback the low battery signal, please replace the battery following below:

- 1.Remove the bracket
- 2.Open the base cover
- 3.Place 3 pieces LR20 battery
- 4.Restore the base cover

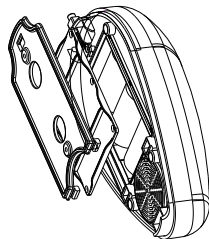

## 5. Learn code

### Enroll to panel

Enter into the coding mode of the panel, Press [learn code] key on the siren till coding LED is blinking. The siren will give sound confirmation when enroll successful.

### Enroll to other Wireless devices

Press the [learn code] key till coding LED is blinking then trigger the wireless device coding key( such as tamper switch).The siren will sound confirmation when enroll successful.

### Delete code

Press both Learn code key and delete code key, the LED will lights on 3 seconds then blink for 10 seconds And at last keeping lighting. That means all the codes delete successful.